

本書は製品とともに大切に保管してください Please keep this manual carefully with the Product.

# N8103-107 SCSI コントローラ ユーザーズガイド SCSI Controller User's Guide

# まえがき

このたびは、N8103-107 SCSI コントローラをお買い上げいただきまことにありがとうございます。

本書は、N8103-107 SCSI コントローラ(以下「本製品」と呼びます)を正しく、安全に設置、使用するための 手引きです。本製品を取り扱う前に必ずお読みください。また、本製品を使用する上でわからないこと、不 具合が起きたときにもぜひご利用ください。本書は必要な時にすぐに参照できるように必ずお手元に保管し てください。

本製品を取り付ける基本処理装置(以下「本体装置」と呼びます)の取り扱いについての説明は、本体装置に 添付のユーザーズガイドを参照してください。また、本製品を取り扱う前に「安全上のご注意」、「取り扱い 上のご注意」を必ずお読みください。

# Preface

Thank you very much for purchasing the N8103-107 SCSI Controller.

This is a guide to the safe and proper use of the N8103-107 SCSI Controller (hereafter, this product). Be sure to read this guide before handling this controller. Please refer to this document if there is something that you do not understand or a problem occurs while using this controller. Store this manual close to this controller for easy reference.

For an explanation on the handling of the basic processing unit (hereafter, Computer) that this controller is installed in, please refer to the User's Guide that came with the basic processing unit. In addition, be sure to read the sections entitled "Safety Precautions" and "Precautions on Use" before handling this product.

#### 商標について

Microsoft とそのロゴ、および Microsoft Windows, Windows, Windows Server 2003 は米国 Microsoft Corporationの米国およびその他の国における登録商標です。 Adaptec とそのロゴ、SCSI Select は米国 Adaptec, Inc. の登録商標です。 記載の会社名および商品名は各社の登録商標または商標です。

#### **Concerning trademarks**

Microsoft and its logo, Windows and Windows Server 2003 are all registered trademarks of Microsoft Corporation in the United States of America and/or other countries.

Adaptec and its logo, SCSISelect are all registered trademarks of Adaptec, Inc. in the United States of America and other countries.

ご注意

- (1) 本書の内容の一部または全部を無断転載することは禁止されています。
- (2) 本書の内容に関しては将来予告なしに変更することがあります。
- (3) 弊社の許可なく複製・改変などを行うことはできません。
- (4) 本書は内容について万全を期して作成いたしましたが、万一ご不審な点や誤り、記載もれなどお気づき のことがありましたら、お買い求めの販売店にご連絡ください。
- (5) 運用した結果の影響については(4) 項にかかわらず責任を負いかねますのでご了承ください。

Note

- (1) No part of this document may be reproduced without consent.
- (2) The content of this document may be changed without prior notice.
- (3) No part of this document may be revised or reproduced without the permission of NEC Corporation.
- (4) Although great care has been taken to ensure the accuracy and completeness of the information contained in this document, please contact the dealer you purchased this controller from if you have any questions or find mistakes or omissions.
- (5) NEC Corporation shall not be liable for any consequences resulting from the use of this controller, regardless of item (4) above.

本書は必要な時にすぐに参照できるように必ずお手元に保管してください。 「安全上のご注意」および「取り扱い上のご注意」を必ずお読みください。



本製品を安全に正しくご使用になるために必要な情報が記載されています。 また、本文中の名称についてはユーザーズガイドの「各部の名称と機能」の項をご参照ください。

## 安全にかかわる表示

本書では危険の程度を表す言葉として、「警告」と「注意」という用語を使用しています。それぞれの用語は次のような意味を持つものとして定義されています。

表示は次の3種類の記号を使って表します。それぞれの記号は次のような意味を持つものものとして定義されています。

$\triangle$	注意の喚起	この記号は危険が発生するおそれがあることを表します。 記号の中の絵表示は危険の内容を図案化したものです。	(例) 
$\bigcirc$	行為の禁止	この記号は行為の禁止を表します。記号の中や近くの絵表 示は、してはならない行為の内容を図案化したものです。	(例) (分解禁止)
	行為の強制	この記号は行為の強制を表します。記号の中の絵表示は、 しなければならない行為の内容を図案化したものです。危 険を避けるためにはこの行為が必要です。	(例) (ヨードを抜く)

#### 注意の喚起

$\triangle$	特定しない一般的な注意・警告を示しま す。	高温による傷害を負うおそれがあること を示します。
Â	感電のおそれがあることを示します。	発煙または発火のおそれがあることを示 します。

#### 行為の禁止

$\bigcirc$	特定しない一般的な禁止を示します。		本装置を分解・修理・改造しないでくだ さい。感電や火災のおそれがあります。
------------	-------------------	--	------------------------------------------

#### 行為の強制

特定しない一般的な使用者の行為を指示 します。説明に従った操作をしてくださ い。



本装置の電源コードをコンセントから 抜いてください。火災や感電のおそれが あります。

# 安全上のご注意

本製品を安全にお使いいただくために、ここで説明する注意事項をよく読んでご理解し、安全に活用してく ださい、記号の説明については巻頭の「安全にかかわる表示」の説明を参照してください。







Keep this operation manual on hand so that you can refer to it when necessary. Be sure to read the "Safety Precautions" and "Precautions on Use."

# Safety Precautions - Read carefully -

This section offers essential information for the safe and proper use of this controller. Please refer to the section of "Names and Functions" of the user's guide for the name in this manual.

## Safety Symbols

Follow all instructions in this User's Guide to ensure the safe operation of this controller This guide explains what areas pose a danger, what may result from not following safety instructions and how to avoid danger. "Warning" and "Caution" are the terms used here to express the level of danger. These terms mean the following.

WARNING	Indicates a hazard that can lead to death or serious injury.
	Indicates a hazard that can lead to burning, injury or damage to property.

Precautions and notices against hazards are presented with one of the following 3 symbols. The individual symbols are defined as follows.

$\triangle$	Attention	This symbol indicates the presence of a hazard. An image in the symbol illustrates the hazard type.	(Example)
			(Electric shock)
$\bigcirc$	Prohibited Action	This symbol indicates prohibited actions. An image in the symbol illustrates a particular prohibited action.	(Example)
-			(Do not disassemble)
	Mandatory Action	This symbol indicates mandatory actions. An image in the symbol illustrates a mandatory action to avoid a particular hazard.	(Example)

#### Attention

	Indicates general warnings and cautions.	Indicates a hazard that can lead to burns.
Â	Indicates a hazard that can lead to electric shock.	Indicates a hazard that can lead to fire.

#### **Prohibited Action**

Indicates a general prohibition.		Indicates prohibition of disassembly or modification.
----------------------------------	--	-------------------------------------------------------

#### Mandatory Action



Indicates general instruction for users.



Indicates that you must unplug from the electrical outlet.

# Safety Precautions

Please read and make sure you understand the warnings and cautions described below to use the product safely. Please refer to "Safety Symbols" at the beginning for an explanation on the symbols.





If smoke, odor, or noise is present, immediately turn off the POWER/SLEEP switch and disconnect the power plug from the outlet, then contact your sales agent. Using the server in such conditions may cause a fire.



# CAUTION

### Connect firmly.

Please connect the product to the computer firmly. A loose connection can cause a contact failure and can lead to smoke or fire.



### Insert the power plug into the outlet as far as it goes.

Heat generation resulting from a halfway inserted power plug/cable (imperfect contact) may cause a fire. Heat will also be generated if condensation is formed on dusty blades of the halfway inserted plug, increasing the possibility of fire.



### Do not use any unauthorized interface cable.

Use only the interface cable that comes with your server. Use of an unauthorized interface cable may cause a fire when the electric current exceeds the rated flow. Also, observe the following to prevent an electric shock or fire caused by a damaged cord.



- Do not use any damaged cable. (Replace a damaged cable with a new one of the same specifications. Ask your sales agent for replacement.)
- Do not step the cable.
- > Do not place any object on the cable.
- > Do not alter, modify, or repair the cable.

When disconnecting a cable, hold the connector, and pull it out straight.

Confirm that the SCSI cable connector is not damaged and connector pins are not bending before connecting the cable.

Use only the SCSI cable authorized by NEC and connects it to the proper connector. Ignoring these instructions may cause a short circuit, resulting in a fire, electric shock, or malfunction.



### Do not use or store this product in corrosive environment.

Avoid the usage or storage of this product in an environment which may be exposed to corrosive gases, such as those including but not limited to : sulfur dioxide, hydrogen sulfide, nitrogen dioxide, chlorine, ammonia and/or ozone.

Avoid installing this product in a dusty environment or one that may be exposed to corrosive materials such as sodium chloride and/or sulfur.

Avoid installing this product in an environment which may have excessive metal flakes or conductive particles in the air.

Such environments may cause corrosion or short circuits within this product, resulting in not only damage to this product, but may even lead to be a fire hazard.

If there are any concerns regarding the environment at the planned site of installation or storage, please contact your sales agent.

## 取り扱い上のご注意 - 本製品を正しく動作させるために -

本製品を使用するときに注意していただきたいことを次に示します。これらの注意を無視して、本製品を使用した場合、資産(データやその他の装置)が破壊されるおそれがありますので必ずお守りください。

- 本製品は大変静電気に弱い電子部品です。本体装置の金属フレーム部分などに触れて身体の静電気を逃が してから取り扱ってください。また、本製品の端子部分や部品を素手で触ったり、直接机の上に置いたり しないでください。
- 携帯電話やPHS、ポケットベルなどを近くで使用しないでください。電波による誤動作の原因となります。
- 本製品を落としたり物にぶつけたりしないでください、誤動作や故障するおそれがあります。
- 本書及び「N8103-107 SCSI コントローラ ソフトウェアユーザーズガイド」(添付 CD-ROM 媒体に収録)に記載されている説明をよくお読みになり、正しく取り扱ってください。
- 本体装置の PCI スロットにうまく本製品を取り付けられないときは、いったん本製品を取り外してから取り付けなおしてください。過度の力を加えると破損するおそれがありますので注意してください。
- 本製品の SCSI ID は出荷時に 7 に設定されています。通常のご使用では、この設定を変更しないでください。
- 接続する SCSI 機器の SCSI ID には 7 以外の 0~15 の値を重複しないように設定してください。SCSI 機器の SCSI ID の設定方法については SCSI 機器の取扱説明書を参照してください。

## Precautions on Use - Operating this product properly -

The following precautions must be observed when using this controller. Ignoring these precautions while using this controller will result in the destruction of assets (data and other devices). Please observe the following.

- This product is sensitive to static electricity. Please discharge any static electricity by touching a metal object such as the metal frame of the computer before handling the product. Moreover, do not touch the contacts of the product, or place the product on a desk.
- Turn off the cellular phone or pager. Radio interference may cause malfunctions of this product.
- Do not drop or hit the product. Doing so can lead to malfunction or failure.
- Please read this manual and "N8103-107 SCSI Controller Software User's Guide" which is included in CD-ROM, and handle the product correctly.
- Please read the user's manual of the computer before connecting this product. When connecting the product, insert the product firmly into the PCI slot. If this product is not correctly connected to the PCI slot of computer, remove the product and connect it again. Using excessive force can lead to damage.
- The SCSI ID of this product is set to 7 by default. Ordinarily, there is no need to change the setting.
- Set the unique IDs for other SCSI devices to a value between 0 and 15 other than 7. For information on how to set other SCSI devices, please refer to the user's manuals of the products.

# 本書について

本書は、本製品を正しくセットアップし、使用できるようにするための手引きです。本製品を使用される前 に本書をよくお読みになり、いつでも取り出せる場所に大切に保管してください。本製品の移設の際は必ず 本書も一緒に移設してください。

## 本文中の記号

本文中では次の3つの記号を使用しています。それぞれの意味を示します。(「安全にかかわる表示」については1ページを参照してください。)



# About This Manual

This manual explains how to setup and use this product correctly. Be sure to read this manual before using the product, and keep the manual in a safe place after reading it. If the product is transferred to a third party, please transfer this manual along with it.

## Symbols Used in This Manual

The following three symbols are used in this manual. The meanings of the symbols are described below. (For information on safety, please refer to section "Safety Symbols".)

Notice	Indicates important instructions and cautions on handling this product.	Check	Indicates information that needs to be confirmed before handling this product.
Tips	Indicates useful information on using this product.		

# 梱包箱の中身について

梱包箱の中には本製品以外に添付品が入っています。「2.構成品」を参照し、全ての添付品がそろっていることを確認してください。万一、足りないものや破損しているものがあった場合には、本製品をご購入された販売店にご連絡ください。

# 保証について

本製品には「保証書」が添付されています。「保証書」は販売店で所定事項を記入しお渡ししますので、記載 内容をご確認の上、大切に保管してください。保証期間中に故障した場合には、「保証書」の記載内容に基づ き無償修理致します。保証後の修理については、ご購入された販売店もしくはご契約されているNEC保守 サービス会社にご相談ください。

# 製品寿命について

本製品の製品寿命は5年です。本製品の交換については、本製品をご購入された販売店もしくはご契約され ているNEC保守サービス会社へご相談ください。

# 第三者への譲渡について

本製品を第三者に譲渡(または売却)する時には、必ず本書を含む全ての添付品をあわせて譲渡(または売却)してください。

ソフトウェアに関しては、譲渡した側は一切の複製物を所有しないでください。また、インストールした装 置から削除した後、譲渡してください。

## 輸送について

本製品を輸送する際は、「2.構成品」を参考に本体装置から本製品を取り出し、本製品とすべての添付品を購入時の梱包箱入れてください。

# データの保管について

オペレータの操作ミス、衝撃や温度変化等による装置の故障によってデータが失われる可能性があります。 万一に備えて、ハードディスクドライブに保存されている大切なデータは、定期的にバックアップを行って ください。

## 廃棄について

本製品の廃棄については、各自治体の廃棄ルールに従って分別廃棄して下さい。詳しくは、各自治体にお問い合わせ下さい。



ハードディスクドライブやバックアップデータカートリッジ、フロッピーディス ク、その他書き込み可能なメディア(CD-R/CD-RWなど)に保存されている データは、第三者によって復元や再生、再利用されないようお客様の責任において 確実に処分してから廃棄してください。個人のプライバシーや企業の機密情報を保 護するために十分な配慮が必要です。

# Packing Box Contents

There are various other accessories included in the packing box besides this controller. Please refer to the packing list accompanying the box to make sure that all parts are included. Contact the dealer that you bought this controller from if any parts are missing or damaged.

## Lifetime

This product has a product lifetime of five years. The holding period for replacement parts is five years from production.

# Transferring Ownership to a Third Party

When transferring ownership or selling this product to a third party. Be sure to pass on this manual and all accessories together with this product.

The party transferring or selling this controller must transfer all software and maintain no copies. As well, all installed software must be deleted before this product is transferred or sold.

# Transportation

Data may be lost through a device malfunction due to human error, physical shock, temperature change or other means. To prevent this, be sure to regularly backup essential data saved on the hard disk.

# Storing Data

Data may be lost through a device malfunction due to human error, physical shock, temperature change or other means. To prevent this, be sure to regularly backup essential data saved on the hard disk.

## Disposal

Dispose of this cage according to governing regulations. Contact your country body for details.



Dispose the data saved in hard disks, backup data cartridges, floppy disks, and other data acceptable media (such as CD-R and CD-RW) securely in the customer's responsibility so that the data may not be restored, reproduced, and/or reused by third parties. Take sufficient notes to protect personal privacy and corporate secret information.

# 目次

安全上のご注意 - 必ずお読みください1-
▲ 安全にかかわる表示
∠!♪ 安全上のご注意2 -
取り扱い上のご注意 - 本製品を正しく動作させるために
本書について8-
本文中の記号8 -
梱包箱の中身について9-
保証について9-
製品寿命について9-
第三者への譲渡について9-
輸送について9-
データの保管について
廃棄について
目次
1.本製品について13-
1-1.仕禄
1-2.本製品の特徴
1-3.SCSIの概要
1-4.SCSI ID
1-5.SCSI ハスのターミネート
2.構成品
3.各部の名称と磯龍
4.セットアッフ手順
4-1.PCI フラケットの取り付け
4-2.本体装直への取り付け
4-3.SCSI ケーフルの接続
4-4.SCSI コントローフの設定
4-5.トライハのインストール
5.5USI BIUS - 5USISE/ECT
-1.303136/601の出版
J-2.JUJIJERUI U匹到
つ-つ.つしつこと//ect の称 」
0.注忌争棋 / 四つにてつい処理
0-1.注息争塤
6-2.困つにとさの処理30 -

# Contents

Safety Precautions - Read carefully	4	-
∧ Safety Symbols	4	-
Safety Precautions	5	-
Precautions on Use - Operating this product properly	7	-
About This Manual	8	-
Symbols Used in This Manual	8	-
Packing Box Contents	10	-
Lifetime	10	-
Transferring Ownership to a Third Party	10	-
Transportation	10	-
Storing Data	10	-
Disposal	10	-
Contents	12	-
1.About This Product	31	-
1-1.Specifications	31	-
1-2.Features	31	-
1-3.Overview of SCSI	32	-
1-4.SCSI ID	32	-
1-5.Termination the SCSI Bus	32	-
2.Components	33	-
3.Names and Functions	34	-
4.Setup	35	-
4-1.Installation of a PCI bracket	36	-
4-2.Installation to the computer	37	-
4-3.Connecting a SCSI Cable	39	-
4-4.SCSI Controller Configurations	40	-
4-5.Installation of a SCSI driver	40	-
5.SCSI BIOS - SCSISelect	41	-
5-1.About SCSISe/ect	41	-
5-2.Starting SCSISe/ect	42	-
5-3.Exiting SCSISe/ect	43	-
5-4.Using SCSISelect Settings	44	-
6.Notice / Troubleshooting	48	-
6-1.Notice	48	-
6-2.Troubleshooting	48	-

# 1.本製品について

## 1-1.仕様

項目		仕様	備考
SCSI チャンネル数		1 チャンネル	
SCSI コネクタ数		内部 1 コネクタ(68-pin HD x 1) 外部 1 コネクタ(68-pin VHDCI x 1)	
SCSI プロトコル		Ultra320 SCSI	
PCI Express バスタイプ		1レーン	
外形寸法		64.4mm(幅)×167.6mm(奥行)	
重量		0. 075Kg	
動作電圧		PCI Express 3.3V/12V	
消費電力		6. 5W	
動作時		温度 5 ~ 40℃ 湿度 20 ~ 80%	結示し たいこと
IJĨF垛垷	保管時	温度 -10 ~ 55℃ 湿度 20 ~ 95%	和路 しない こと

## 1-2.本製品の特徴

O

本製品はUItra320 SCSI対応の SCSIカードです。68 ピンコネクタ (LVD/SE)と VHDCIコネクタ (LVD/SE) に合計で最大15台までのSCSI機器を接続できます。 本製品は1レーンの PCI Express に対応しています。 本製品はブラケットの交換によりロープロファイルの PCI スロットに実装可能です。

- 本製品に Ultra SCSI (Wide) 機器と LVD SCSI 機器を同時に接続すると、 すべての LVD SCSI 機器のパフォーマンスが、Ultra SCSI (Wide) 機器と同レベルまで低下します。 ただし、本製品に LVD SCSI 機器だけを接続すれば、最大転送速度は Ultra2 SCSI 重要 機器の場合は 80MB/sec、Ultra160 SCSI 機器の場合は 160MB/sec となります。
  - 弊社が指定する SCSI ケーブルおよび SCSI 機器以外は接続しないでください。指定 以外の SCSI ケーブルおよび SCSI 機器に接続できたとしても本製品及び接続した SCSI 機器が正常に動作しないばかりか、故障するおそれがあります。
  - 接続可能な SCSI ケーブルおよび SCSI 機器については、本製品を購入された販売店 または保守サービス会社にお問い合わせください。

### 1-3.SCSI の概要

SCSIは Small Computer System Interface の略称です。SCSIは、SCSI機器を共通の SCSIバスに接続するための業界標準インターフェイスです。

SCSI バスは、コンピュータに装着した SCSI カードと1つあるいは複数の SCSI 機器からなる電気的 経路です。SCSI 機器は、SCSI ケーブルを使用して SCSI カードに接続します。

SCSI バスを正常に機能させるには、SCSI カードおよび SCSI カードに接続されている各 SCSI 機器に 固有の SCSI ID を割り当て、SCSI バスを正しくターミネートさせる必要があります。

### 1-4.SCSI ID

N8103-107 SCSI コントローラに接続される各機器には、N8103-107 SCSI コントローラ自体も含め、 0 から 15 の固有の SCSI ID 番号が割り当てられなければなりません(本製品には出荷時に SCSI ID 7 が設定されています)。SCSI バス上の各機器は、固有の SCSI ID により識別され、複数の機器が同 時に SCSI バスを使用するときの優先度が決定されます。

SCSI IDを設定するには、その SCSI 機器の取扱説明書を参照してください。

### <u>1-5.SCSI バスのターミネート</u>

SCSI バスで安定したデータ転送を行うには、SCSI バスの終端を正しくターミネートする必要があり ます。そのためには、各ケーブルの終端に接続された機器またはケーブル自体の終端にターミネー タを付けて、ターミネーションを有効にします。各ケーブルの途中に接続されている機器からはタ ーミネータを外し、ターミネーションを無効にします。

SCSI 機器をターミネートする方法は、機器によって異なりますので、ターミネーションを有効また は無効にする方法については、その SCSI 機器の取扱説明書を参照してください。

# 2.構成品

梱包箱には次のものが入っています、ご確認ください。万一、不足や破損しているものがありましたら、本 製品を購入された販売店にご連絡ください。



# 3.各部の名称と機能



- 外部コネクタ (68-pin VHDCI)
   外部 SCSI 機器を接続するコネクタ。
- 内部コネクタ(68-pin HD) 内部 SCSI 機器を接続するコネクタ。
- スクリューホール SCSI ケーブルのコネクタを固定するためのネジ穴。
- ④ LED コネクタ
   LED ケーブルを接続するためのコネクタ。
- ブラケット 本体装置の増設スロットへ固定するためのブラケット。
- ⑥ PCI バス接続部
   本体装置の PCI スロットと接続するための端子。

# 4.セットアップ手順

次の手順に従って本製品のセットアップを行います。



注意



#### 高温に注意する

本体装置の電源を OFF にした直後は、装置内の部品が高温になっています。十分に冷めたことを 確認してから取り付け/取り外しを行ってください。

### 確実に接続する

本体装置に取り付ける際は確実に接続してください。中途半端に取り付けると接触不良を起こ し、発煙や発火の原因となるおそれがあります。



## <u>4-1.PCI ブラケットの取り付け</u>

ご購入時、本製品にはフルハイトタイプの PCI ブラケットが取り付けられています。本製品をロー プロファイルに対応した PCI スロットに取り付ける場合は、添付されているロープロファイルタイ プの PCI ブラケットに交換する必要があります。

1. 外部 VHDCI コネクタの固定ネジ(2本)を取り外します。



ブラケットの交換は、固定ネジのサイズに合ったマイナスドライバーを使用します。

- 2. フルハイトタイプの PCI ブラケットを本製品から取り外します。
- **3.** ロープロファイルタイプの PCI ブラケットを本製品に取り付けます。
- **4.** 外部 VHDCI コネクタの固定ネジ(2本)を取り付けます。



ロープロファイルタイプの PCI ブラケットからフルハイトタイプの PCI ブラケットに取り替える時も同じ手順です。



## 4-2.本体装置への取り付け

次に示す手順に従って本製品を本体装置に取り付けます。

1. 本体装置の電源が OFF (POWER ランプ消灯) になっていることを確認し、電源プラグをコンセント から引き抜きます。



■ 本体装置の電源が ON (POWER ランプ点灯)になっている場合は、各オペレーティング システムの電源 OFF の処理を行った後、本体装置の電源を OFF にしてください。

- 2. 本体装置の取扱説明書に従って本体装置のカバーや部品を取り外します。
- 3. 本体装置の取扱説明書に従って PCI スロットへ本製品を取り付けます。



- PCIボードの取り付け・取り外し方法、PCIスロットの位置は本体装置により異な りますので必ず本体装置の取扱説明書をお読みください。
  - 本体装置の PCI スロットにうまく本製品を取り付けられないときは、いったん本製品を取り外してから取り付けなおしてください。過度の力を加えると破損するおそれがありますので注意してください。

4. 本製品にハードディスクドライブを接続して、ハードディスクドライブのアクセス状態を本体 装置の DISK アクセスランプで表示させる場合は、本体装置に添付されている LED ケーブルを本 製品の LED コネクタに接続します。

本製品に接続する SCSI 機器がバックアップデバイスの場合、本作業を行なう必要

LED ケーブルの有無、取り付け/取り外し方法は、本体装置により異なりますので

- 必ず本体装置の取扱説明書をお読みください。 本製品の LED コネクタは4 ピンタイプです。 [LED ケーブルのコネクタが2ピンタイプの場合1] チェック (( )) - ケーブル(赤) <u>ш</u> ्  $\bigcirc$ 1 [LED ケーブルのコネクタが2ピンタイプ場合2] ケーブル(赤) **→→**(()) <u>ш</u> ्  $\bigcirc$ 1
- 5. 2. で取り外した本体装置のカバーや部品を取り付けます。
- 6. 本体装置の電源コードをコンセントに接続します。

はありません。

### <u>4-3.SCSI ケーブルの接続</u>

次に示す手順に従って SCSI ケーブルを本製品に接続します。



弊社が指定する SOSI ケーブルおよび SOSI 機器以外は接続しないでください。指定以外の SOSI ケーブルおよび SOSI 機器に接続できたとしても本製品及び接続した SOSI 機器が正常に動作しないばかりか、故障するおそれがあります。
 接続可能な SOSI ケーブルおよび SOSI 機器については、本製品を購入された販売店

■ 接続可能な3001 アージルおよび3001 機器に ジビビは、本装品を購入された販売店 または保守サービス会社にお問い合わせください。

1. 本体装置の電源が OFF (POWER ランプ消灯) になっていることを確認し、電源プラグをコンセント から引き抜きます。



本体装置の電源が ON (POWER ランプ点灯) になっている場合は、各オペレーティング システムの電源 OFF の処理を行った後、本体装置の電源を OFF にしてください。

2. SCSI ケーブルの一方のコネクタの向きを本製品のコネクタの向きに合わせて確実に接続して、 外部 SCSI ケーブルの場合はコネクタ両側にあるスクリューでコネクタを固定します。



- **3.** SCSI ケーブルの他方のコネクタの向きを SCSI 機器のコネクタの向きに合わせて確実に接続して、外部 SCSI ケーブルの場合はコネクタ両側にあるスクリューでコネクタを固定します。
- 4. 本体装置の電源コードをコンセントに接続します。

### <u>4-4.SCSI コントローラの設定</u>

本製品は出荷時に最適な設定を行っており通常のご使用では設定を変更する必要はありませんが、 必要に応じて本製品の「SCSI Se/ect」ユーティリティを使用して設定を行ってください。 「SCSI Se/ect」ユーティリティの詳細については「5.SCSI BIOS - SCSI Select - 」を参照してくだ さい。



SCSI機器によっては「SCSI Select」ユーティリティを使用して転送速度の設定を 変更する必要があります。詳しくは SCSI機器の取扱説明書を参照してください。

## <u>4-5.ドライバのインストール</u>

本製品をご使用いただくには、各オペレーティングシステムに対応する SCSI ドライバをインストールする必要があります。

詳しくは、添付品の「N8103-107 Windows Driver CD」内の「N8103-107 SCSI コントローラ ソフトウ ェアユーザーズガイド」(¥Manual¥JPN¥Setup.pdf)を参照してください。



 Linux用のSCSIドライバについては、「NEC 8 番街」のLinux on Express5800 > Linux Distribution > Linux 動作確認情報 > 拡張ボード/外付けディスクアレイ装置 を参照してください。

[NEC 8 番街] http://www.express.nec.co.jp/

# 5.SCSI BIOS - SCSISelect -

「SCSISe/ect」ユーティリティは本製品に対して各種設定を行うためのユーティリティで、起動には 特殊な起動ディスクなどを使用せず、自己診断プログラム「POST」の実行中に簡単なキー操作から起 動することができます。



本製品には、最新バージョンの「SCSI Select」ユーティリティが内蔵されています。 このため設定画面が本書で説明している内容と異なる場合があります。本書と異な る設定項目については、本製品を購入された販売店または保守サービス会社にお問 い合わせください。

### 5-1.SCSISelectの用途

「SCSI Se /ect」ユーティリティは次のような場合に使用します。必要に応じて設定を行ってください。

本製品に接続した SCSI 機器との転送速度を設定する場合



- 手順
  - 「SCSI Se / ect」ユーティリティを起動する。 1.
  - 「Configure/View Host Adapter Setting」を選択する。 2.
  - 「SCSI Device Configuration」を選択する。 3.
  - 「Sync Transfer Rate (MB/sec)」の値を初期値「320」から SCSI 機器が指定する 4. 値に変更する。
  - 5. 設定を保存して「SCSI Se/ect」ユーティリティを終了する。
- 本製品に接続した SCSI 機器からブートしない場合



- 手順
  - 「SCSI Se / ect」ユーティリティを起動する。 1.
- チェック
- 2. 「Configure/View Host Adapter Setting」を選択する。 「Advanced Configuration Options」を選択する。 3.
- 「SCSI Controller Int 13 Support」の値を初期値「Enable」から「Disabled:scan 4. bus」に変更する。
- 5. 設定を保存して「SCSI Se/ect」ユーティリティを終了する。

## <u>5-2.SCSISelectの起動</u>

「SCSI Se /ect」ユーティリティの起動方法を次に示します。

1. 本体装置の電源を ON にします。

POST 実行中の画面に次のメッセージが表示されます。

Adaptec SCSI BIOS v4.31.4 Copyright 2007 Adaptec, Inc. All Rights Reserved.

2. <Ctrl>キーを押しながら<A>キーを押します。

「SCSI Select」ユーティリティが起動し、「Main」メニューが表示されます。

29320LPE

XX:XX:XX

3. 29320LPE を選択して<Enter>キーを押します。

「Options」メニューが表示されます。

\_\_\_\_\_ Options \_\_\_\_

Configure/View SCSI Controller Settings SCSI Disk Utilities

## <u>5-3.SCSISelectの終了</u>

「SCSI Se/ect」ユーティリティの終了方法を次に示します。

1. 「SCSI Select」ユーティリティの設定を変更した場合は、終了する前に変更を保存するかを確認 するメッセージが表示されます。

設定内容に誤りが無ければ「Yes」を選択し、〈Enter〉キーを押します。

Save	Changes	Mode?	_
	Yes		
	No		
	Save	Save Changes Yes No	Save Changes Mode? Yes No

2. 「SCSI Se/ect] ユーティリティを終了して良いかを確認するメッセージが表示されるまで<ESC> キーを押します。

「Yes」を選択し、〈Enter〉キーを押して終了します。



3. 確認のメッセージが表示されたら、何れかキーを押して本体装置を再起動します。

「SCSI Se / ect」ユーティリティで行った変更は、本体装置が再起動された後に有効になります。

## <u>5-4.SCSISelectの設定</u>

オプションを設定するには、矢印キーを押して設定するオプションにカーソルを移動し、〈Enter〉 キーを押します。

オプションを選択したときに次のメニューが表示されることもあります。〈Esc〉キーを押せば、いつでも直前のメニューに戻れます。



■ 設定を初期値に戻す場合は、「Configure/View SCSI Controller Settings」を選 択後に表示される画面で<F6>キーを押してください。

### [Configure/View SCSI Controller Settings]

「Configure/View SCSI Controller Settings」は本製品に対するさまざまな設定を行えます。

オフション	設定可能な値	初期値
SCSI Bus Interface Definitions:	A 15	_
SCSI Controller ID	0 - 15	7
SCSI Controller Parity	Enabled、	Enabled
	Disabled	
SCSI Controller Termination	Automatic、Disabled	Automatic
Additional Options:		
Boot Device Configuration Option:		
Select Master SCSI Controller	29320LPE	29320LPE
SCSI Device Configuration:		
Sync Transfer Rate (MB/sec)	320、160、80.0、66.6、	320
	40.0,33.3,20.0,10.0,	
	ASYN	
Paketized	Yes, No	Yes
QAS	Yes, No	Yes
Initiate Wide Negotiation	Yes, No	Yes
Enable Disconnection	Yes, No	Yes
Send Start Unit Command	Yes, No	Yes
BIOS Multiple LUN Support	Yes, No	No
Include in BIOS Scan	Yes, No	Yes
Advanced Configuration:		
Reset SCSI Bus at IC Initialization	Enabled, Disabled	Enabled
Display <ctrl><a> Message During BIOS Initialization</a></ctrl>	Enabled, Disabled	Enabled
Extended INT 13 Translation for DOS Drivers > 1 Gbvte	Enabled, Disabled	Enabled
POST Display Mode	Verbose, Silent,	Verbose
	Diagnostic	
SCSI Controller Int 13 Support	Enabled、	Enabled
	Disabled:NOT scan,	
	Disabled∶scan bus	
Domain Validation	Enabled, Disabled	Enabled
Support Removable Disks Under Int 13 as Fixed Disks	Boot Only、	Disalbed
	All Disks、	
	Disabled	
BIOS Support for Bootable CD-ROM	Enabled、Disabled	Enabled

#### SCSI Bus Interface Definitions

- SCSI Controller ID (初期値:7) SCSIカードの SCSI ID を設定します。本製品の SCSI ID は7
   に設定されており、これは SCSI バスの中で最も高い優先度を意味します。この設定は変更しないことをお勧めします。
- SCSI Controller Parity (初期値: Enabled) SCSI カードでは、SCSI バス上で転送されるデータ に誤りがないかどうかが検査されます。現在の SCSI デバイスでは、ほとんどがパリティチェックを サポートしています。ただし、SCSI バス上のデバイスがパリティチェックをサポートしていない場 合は、このオプションを無効にします。同じ SCSI バス上では、パリティチェックをサポートするデ バイスとしないデバイスを混在させないでください。
- SCSI Controller Termination (初期値: Automatic) SCSI カードのターミネーションを設定します。初期値は Automatic で、必要に応じて SCSI カードがターミネーションを調整します。この設定は変更しないことをお勧めします。

#### Additional Options

#### Boot Device Configuration

■ Select Master SCSI Controller - (初期値: 29320LPE)

#### SCSI Device Configuration

SCSI機器の設定オプションは、接続されている SCSI機器ごとに設定できます。

- Sync Transfer Rate (初期値: 320) SCSI カードがサポートする最大同期データ転送速度を設定 します。最大値(初期値)320MB/sec のままにしておくことをお勧めします。この値は接続する SCSI 機器によっては変更が必用な場合があります。詳しくは SCSI 機器の取扱説明書を参照してください。
- Paketized (初期値: Yes) パケット化プロトコルの動作スピードとして 320MB/sec が求められます。このオプションは、有効にしたときにデバイスドライバに設定してあれば使用出来ます。BIOSのみではこのオプションをサポートしていません。
- QAS (初期値: Yes) この Quick Arbitration and Selection オプションにより、どのデバイスで も、SCSI バスにかかる制御リリースのオーバーヘッドが減ります。この改善により、コマンドのオ ーバーヘッドがへり、バスの利用率が最大にたかまります。このオプションは、有効にしたときに デバイスのドライバに設定してあれば使用できます。BIOS のみではこのオプションをサポートして いません。
- Initiate Wide Negotiation (初期値: Yes) SCSI カードが SCSI ターゲットを使用してワイドネ ゴシエーションを開始できます。Yes に設定すると、SCSI カードは 16 ビットのデータ転送(ワイド ネゴシエーション)を行います。No に設定すると、SCSI デバイスがワイドネゴシエーションを要求 しない限り、SCSI カードは 8 ビットのデータ転送を行います。
- Enabled Disconnection (初期値: Yes) Yes に設定すると、SCSI デバイスを SCSI バスから切断 することを可能にします。No に設定すると、SCSI デバイスは、SCSI バスから切断できません。2つ 以上の SCSI デバイスが SCSI カードに接続している場合この設定は、この設定を Yes にします。No に設定されている場合、SCSI デバイスは、SCSI バスから切断できず、パケット転送が実行できなか ったり、転送速度が Ultra160 レベルに設定されたりします。
- Send Start Unit Command (初期値: Yes) Yes に設定されると、Start Unit Command を起動時に SCSI デバイスに送ります。これによって、システムが起動した時に、SCSI カードによって SCSI デ バイスの電源を1つずつ入れられるため、システムの電源にかかる負荷が軽減されます。このコマ ンドを使わないと、SCSI デバイスはすべて、いっせいに電源が入ります。

次のオプションは、SCSIカードBIOSが無効になっている場合に指定しても無効になります。(通常、SCSIカードBIOSは初期値で有効になっています。)

- **BIOS Multiple LUN Support** (初期値: No) SCSI デバイスに複数のLUN(Logical Unit Number) が設定されていない場合は、この設定を No のままにしてください。Yes に設定すると、SCSI カード BIOS により、複数のLUN がある SCSI デバイスからシステムが起動できるようになります。
- Include in BIOS Scan (初期値: Yes) Yes に設定すると、SCSI デバイスが INT13 デバイス (SCSI ディスクドライブなど)で、デバイスドライバのない場合に、SCSI カード BIOS によって制御されます。No に設定すると、SCSI カード BIOS は SCSI デバイスを制御せず、デバイスドライバが必要になります。この BIOS では、デバイスドライバを追加しなくても、INT13 デバイスを8台までサポートできます。

#### Advanced Configuration

- Reset SCSI Bus at IC Initialization (初期値: Enabled) Enabled に設定すると、電源を投入 した後の初期化時に、BIOS によって SCSI バスがリセットされ、SCSI デバイスのバスをスキャンす るまでに 2 秒の待ち時間が発生します。このオプションを Disabled に設定すると、SCSI カード BIOS によって SCSI バスがリセットされることはなく、2 秒の遅れも発生しません。
- Display <Ctrl><A> Message During BIOS Initialization (初期値: Enabled) Enabled に設定 すると、SCSI カード BIOS が、システムの起動時に<Ctrl><A>を押すことで、SCSI Select (TM) Utility! メッセージを表示します。このオプションが Disabled に設定されていても、SCSI カード BIOS のタ イトルが表示された後で<Ctrl>キーと<A>キーを押せば、SCSI Select ユーティリティを起動するこ とができます。
- Extended INT 13 Translation for DOS Drivers > 1 GByte (初期値: Enabled) Enabled に設定 すると、1GB以上の SCSI ハードディスクドライブの拡張したトランスレーション構造を表示します。 この設定は MS-DOS の現行バージョンでのみ必要になります。UNIX など、他のオペレーティングシ ステムでは設定する必要はありません。
- Post Display Mode (初期値: Verbose) 電源を投入した後の初期化中に、どれだけの情報が表示 されるかは、このモードによって異なります。次ぎのモードを使用できます。
  - Verbose SCSI バスのスキャン結果は表示されますが、PCI バスのスキャン結果は表示され ません。
  - Silent 電源を投入した後の初期化については何も表示されません。ただし、SCSIバスや SCSIバスに障害が発生した場合はエラーメッセージが表示されます。
  - Diagnostic PCI バスと SCSI バスのスキャン結果は、別々に表示されます。PCI と SCSI の スキャン結果には、少し時間があきます。
- SCSI Card INT 13 Support (初期値: Enabled) このオプションでは、POST 時に BIOS の状態を 制御します。次ぎの設定が使用できます。
  - Enabled SCSI カードに接続する SCSI ディスクドライブからブートするのに INT13 をサポートします。このオプションを使用するときは、以下のオプションが使用可能です。
    - Extended INT 13 Translation for DOS Drives > 1 GByte
    - Support Removable Disks Under INT 13 as Fixed Disks
  - Disabled:NOT scan このオプション設定するのは、SCSI バス上のデバイスがデバイスドライバで制御され、BIOS が不要な場合と、BIOS に SCSI バスをスキャンさせない場合です。必要に応じて、SCSI Select は使用可能な状態のままになっています
  - Disabled:scan Bus このオプションを設定するには、SCSIバス上のデバイスがデバイスド ライバで制御され、SCSIバスのスキャンにBIOSが必要な場合です。Send Start Unitコマン ドの設定により、デバイスの速度をアップすることができます。必要に応じて、SCSISe/ect は使用可能な状態のままになっています。

次のオプションは、SCSIカードBIOSが無効になっている場合に指定しても無効になります。(通常、SCSIカードBIOSは初期値で有効になっています。)

- Domain Validation (初期値: Enabled) SCSI バス上の各デバイスに対して、最適な転送速度を 定め、それに従って転送速度を設定します。このオプションは、有効にしたときにデバイスドライ バに設定してあれば使用できます。BIOS のみではこのオプションをサポートしていません。
- Support Removable Disks Under BIOS as Fixed Disks (初期値: Disabled) SCSIカードBIOS でどのムーバルメディアドライブをサポートするか決定します。オプションは以下のとおりです。
  - Disabled リムーバルメディアドライブは、ハードディスクドライブとして認識されません。
     ドライブは BIOS によって制御されないので、ドライバが必要です。
  - Boot Only ブートデバイスとして指定されているリムーバルメディアドライブだけが、ディスクドライブとして認識されます。
  - All Disks BIOS がサポートするすべてのリムーバルメディアドライブが、ディスクドライ ブとして認識されます。
- **BIOS Support for Bootable CD-ROM** (初期値: Enabled) Enabled に設定されているとき、SCSI カード BIOS は、システムが CD-ROM ドライブからブートすることを可能にします。

### **SCSI Disk Utilities**

「SCSI Disk Utilities」は(インストールされている機器を確認するために)SCSI バスをスキャンし、 すべての SCSI ID と、各 ID に割り当てられている機器の一覧を表示します。また、ハードディスク ドライブのローレベルフォーマットやチェックが行えます。

- Format Disk ー ディスクドライブに対してローレベルフォーマットを実行します。ほとんどの SCSI ハ ードディスクドライブは工場出荷時にフォーマットされているため、もう一度フォーマットする必要は ありません。
- Verify Disk Media ー ディスクドライブのメディアをスキャンしてエラーをチェックします。メディア に不良ブロックが検出されると、ブロックの再配置を行うかを確認するメッセージが表示されます。YES を選択すると、不良ブロックは使用できなくなります。〈Esc〉キーを押せば、いつでもユーティリティを 中止できます。

# 6.注意事項 / 困ったときの処理

### 6-1.注意事項

本製品ではスタンバイ及び休止状態を使用しないでください。 スタンバイ及び休止状態からの復帰時に、以下の症状が発生する場合があります。

ロ SCSI 機器にアクセス出来ない。

ロ イベントログに以下のシステムログが登録される。

: adpu320m ソース イベントID:15 :デバイス ¥Device¥Scsi¥adpu320m(x) はまだアクセスできる状態ではありません。 説明

※(x)部分には任意の数字が入ります。



スタンバイ及び休止状態からの復帰時に SCSI 機器にアクセスできない、または、 イベントログにエラーを示すシステムログが登録される場合は、システムを再起動 してください。

### 6-2.困ったときの処理

本製品の取り付け後、オペレーティングシステムやアプリケーションが正常に動作しなかった場合 は、以下の項目を確認してください。

- ロ 本製品は正しく基本装置に取り付けられていますか?
- ロ すべての SCSI 機器の電源が入っていますか?
- ロ すべての SCSI ケーブルと電源ケーブルが正しく接続されていますか?
- ロ SCSI バスに接続されている各 SCSI 機器には固有の SCSI ID が設定されていますか?
- ロ SCSI バスが正しくターミネートされていますか?
- ロ SCSI ドライバはインストールされていますか?

O

以上の確認を行っても基本装置が正しく動作しない場合は、いったん本製品を取り 外した後、本体装置を起動して自己診断プログラム「POST」の実行で異常がないこと を確認してください。POST が正常に終了するようでしたら、本製品が故障している ことが考えられます。本製品を購入された販売店または保守サービス会社にご連絡 ください。

# 1.About This Product

## 1-1.Specifications

I	tem	Specification	Remarks
Number of SC	SI channel	1 Channel	
Number of SCSI connectors		Internal 1 Connector (68-pin HD x 1) External 1 Connector (68-pin VHDCI x 1)	
SCSI Bus		Ultra320 SCSI	
PCI Express C	Connector	8lane -	
Dimensions		64.4mm(D) x 167.6mm(W)	
Weight		0.075Kg	
Voltage		PCI Express 3.3V/12V	
Power		6.5W	
Environment	Operating	Temperature 0 - 50 degree Humidity 20 - 80 %	No condensation
S	Non Operating	Temperature 10 - 55 degree Humidity 20 - 95 %	

## 1-2.Features

This product is a SCSI host bus adapter card compatible with Ultra320 SCSI. 68-pin LVD/SE connector and VHDCI LVD/SE connector enable up to 15 SCSI devices to be connected. This product is compatible with the x1 lane PCI Express.

This product can be implemented to a low profile PCI slot, by replacing a bracket.



- Do not connect this product to a computer or SCSI device that is not recommended by NEC Corporation. If the product is connected to a computer or SCSI device that is not recommended by NEC Corporation, the product may malfunction or fail.
- Please contact the retailer or service center for the information on recommended computers and or SCSI devices.

## 1-3.Overview of SCSI

SCSI is stands for Small Computer System Interface. SCSI is an industry standard interface that enables SCSI devices to be connected to a common SCSI bus.

The SCSI bus is an electronic circuit comprising a SCSI card attached to a computer and one or more SCSI devices. SCSI devices are connected to the SCSI card with SCSI cables.

To use the SCSI bus correctly, you must assign a unique SCSI ID to each SCSI device that is connected to the SCSI card, and terminate the SCSI bus correctly.

## 1-4.SCSI ID

A unique SCSI ID between 0 and 15 must be assigned to each SCSI device (including the N8103-107 SCSI Controller) that is connected to the N8103-107 SCSI Controller (the SCSI ID of this product is set to 7 by default.) Each SCSI device on the SCSI bus is uniquely identified with the SCSI ID, and the priority when using multiple devices at the same time is decided by the IDs. For information on how to set the SCSI ID, please refer to the user's manual of the product.

## 1-5. Termination the SCSI Bus

For successful data transmission using the SCSI bus, the SCSI bus must be terminated correctly. To terminate the SCSI bus, you must attach a terminator to the furthest SCSI device or cable. The terminators of the other SCSI devices must be removed.

The method of terminating a SCSI device differs for each device. Therefore, please refer to the user's manual of the product for information on how to enable or disable termination for the device.

# 2.Components

Please confirm that the following components are included with the product. If you find any of them are missing or damaged, please contact the retailer you bought the product from.



# 3.Names and Functions



- ① External Connector (68-pin VHDCI) Connector used to connect this product to an External SCSI device.
- Internal Connector (68-pin HD) Connector used to connect this product to an Internal SCSI device.
- Screw Hole The screw hole to fix the connector of the SCSI cable.
- LED Connector Connector used to connect this product to a LED Cable.
- FCI Bracket The bracket to fix in on the computer.
- PCI Card Edge Connector to be inserted into the PCI slot of the computer.

# 4.Setup

Please follow the steps described below to set up this product.





Do not handle this product during an electrical storm.

When installing this product in the computer, please read the user's manual of the computer and unplug the power plug from the electrical outlet. Do not insert or remove the power plug with wet hands. Doing so can lead to faults or electric shock.

Do not pull on the lead when unplugging the power plug from the electrical outlet. Doing so can damage the power cord and lead to shorting or electric shock.





#### Avoid installation in extreme temperature conditions.

Immediately after the server is powered off, its internal components such as hard disks are very hot. Leave the server until its internal components fully cool down before installing/removing any component.



#### Connect firmly.

Please connect the product to the computer firmly. A loose connection can cause a contact failure and can lead to smoke or fire.



## 4-1.Installation of a PCI bracket

A full height PCI bracket is attached to this product at factory shipment. If you insert this product in a low profile PCI slot, you have to replace the bracket with a low profile one that comes with this product.

1. Remove the two screws of the external VHDCI connector.



Exchange of a bracket uses the minus screwdriver suitable for the size of a screw.

- 2. Remove a full height PCI bracket from this product.
- **3.** Install a low profile PCI bracket to this product.
- 4. Tighten the two screws for the external SCSI connector.



Follow the same procedure when a low profile PCI bracket is replaced with a full height PCI bracket.



## 4-2.Installation to the computer

To install this product to the computer:

1. Confirm the power to the computer is off (power lamp off), then unplug the power cord from the electrical outlet.



If the power to the computer is on (power lamp on), shut down the operating system and then turn off the computer.

- 2. Remove the cover and other components of the computer if necessary following the instructions in the user's manual of the computer.
- **3.** Install this product to a PCI slot as following the instructions described in the user's manual of the computer.





- The method of installing and removing the PCI card and the location of the PCI slot differ in different computers. Please read the user's manual of the computer for confirmation.
- If this product is not correctly connected to the PCI slot of the computer, remove the product and connect it again. Using excessive force can lead to damage.

4. Connect the LED cable (provided with the computer) to the LED connector on this product.



This operation is not necessary when you connect SCSI device as a backup device to this product.

The type of LED cable and the method for removing and installing the connector vary depending on your computer. Be sure to read the computer User's Guide attached to the product.



The LED connector of this product is 4-pins

[Connect 2-pins LED Cable (Case 1)]



]昌。

5. Replace the cover and components removed in item 2.

6. Plug the power cord of the computer into the electrical outlet.

## 4-3.Connecting a SCSI Cable

To connect a SCSI Cable:



Do not connect this product to a computer or SCSI device that is not recommended by NEC Corporation. If the product is connected to a computer or SCSI device that is not recommended by NEC Corporation, the product may malfunction or fail.

- Please contact the retailer or service center for the information on recommended computers, SCSI devices, or SCSI cables.
- 1. Confirm the power to the computer is off (power lamp off), then unplug the power cord from the electrical outlet.



- If the power to the computer is on (power lamp on), shut down the operating system and then turn off the computer.
- **2.** Insert a SCSI cable connector in this product's connector fully for firm connection. Secure the connector on both sides with screws.



- **3.** Insert a cable connector (the other side) in SCSI device's connector fully for firm connection. Secure the connector on both sides with screws.
- 4. Plug the power cord of the computer into the electrical outlet.

## 4-4.SCSI Controller Configurations

This product's configuration is optimized at factory shipment. Normally, reconfiguration is not necessary, however, if necessary, you can reconfigure this product by using its utility. Refer to "5.SCSI BIOS - SCSI*Select* - " for the details of the SCSI utilities.



It is necessary to change the setting of the transfer rate by using SCSISelect according to the SCSI device. Please refer to the manual of the SCSI Device.

## 4-5.Installation of a SCSI driver

To use this product, the appropriate SCSI driver for your operating system must be installed. For detailed information, refer to the "N8103-107 SCSI Controller Software User's Guide" which is included in "N8103-107 Windows Driver CD" as "\Manual\ENG\Setup.pdf".



As for Linux, refer to the following URL. - NEC Express5800 Website http://www.nec.co.jp/express/linux/index.html

# 5.SCSI BIOS - SCSISelect -

The SCSISelect utility software is used for setting this product. To start the utility, no special startup disk is required. It can be started by a simple keyboard operation while the self-diagnosis program POST is running.



This product is delivered with the latest version of SCSISelect utility. Therefore, the settings windows may be different from those in this document. In such a case, contact your sales agent for details.

## 5-1.About SCSISelect

SCSISelect are used in the following case.

When you set the transfer rate to the value that the SCSI device requires.



- Steps
- Start SCSISelect. 1.
- 2. Select Configure/View Host Adapter Setting.
- Select SCSI Device Configuration. 3.
- Change Sync Transfer Rate (MB/Sec) from "160" to the value that the SCSI 4. device requires.
- 5. Save changes and exit SCSISelect.
- When you don't boot up a system from the SCSI device.



- Steps 1. Start SCSISelect.
- 2. Select Configure/View Host Adapter Setting.
- 3. Select Advanced Configuration Options.
- 4. Change SCSI Controller Int 13 Support from "Enabled" to "Disabled:scan".
- Save changes and exit SCSISelect. 5.

## 5-2.Starting SCSISelect

Follow these steps to start SCSISelect.

**1.** Turn on the computer.

The following message will be displayed.

```
Adaptec SCSI BIOS v4.31.4
Copyright 2007 Adaptec, Inc. All Rights Reserved.
```

**2.** Hold <Ctrl> key and press <A> key.

SCSISelect utility starts and the "Main" menu will be displayed.

29320LPE	xx:xx:xx

**3.** Select "29320LPE" and press <Enter> key.

"Options" menu will be displayed.

— Options —

Configure/View SCSI Controller Settings SCSI Disk Utilities

## 5-3.Exiting SCSISelect

Follow these steps to exit SCSISelect.

1. If you changed any settings, you are prompted to save the changes before you exit.

At the prompt, select Yes to save the changes.



2. Press <ESC> key until a message prompts you to exit

At the prompt, select Yes to exit.



3. Then press any key to reboot the computer.

Any changes made in SCSISelect will take effect the next time the computer is booted.

## 5-4.Using SCSISelect Settings

To select an option, use the arrow keys to move the cursor to the option, then press <Enter> key. In some cases, selecting an option displays another menu. You can return to the previous menu at any time by pressing <Esc> key.



To restore the original SCSI*Select* default values, press <F6> form the "Configure/View SCSI Controller Settings" menu.

### Configure/View SCSI Controller Settings

Various settings for this product can be changed using "Configure/View Host Adapter Settings".

Option	Available Settings	Default Value
SCSI Bus Interface Definitions:	, nanabie eettiinge	
SCSI Controller ID	0 - 15	7
SCSI Controller Parity	Enabled,	Enabled
	Disabled	
SCSI Controller Termination	Automatic, Disabled	Automatic
Additional Options:		
Boot Device Configuration:		
Select Master SCSI Controller	29320LPE	29320LPE
SCSI Device Configuration:		
Sync Transfer Rate (MB/sec)	320, 160, 80.0, 66.6,	320
	40.0, 33.3, 20.0, 10.0,	
	ASYN	Ma a
Paketized	Yes, NO	Yes
QAS	Yes, No	Yes
Initiate Wide Negotiation	Yes, No	Yes
Enable Disconnection	Yes, No	Yes
Send Start Unit Command	Yes, No	Yes
BIOS Multiple LUN Support	Yes, No	No
Include in BIOS Scan	Yes, No	Yes
Advanced Configuration:		
Reset SCSI Bus at IC Initialization	Enabled, Disabled	Enabled
Display <ctrl><a> Message During BIOS Initialization</a></ctrl>	Enabled, Disabled	Enabled
Extended INT 13 Translation for DOS Drivers > 1 Gbyte	Enabled, Disabled	Enabled
POST Display Mode	Verbose, Silent,	Verbose
	Diagnostic	
SCSI Controller Int 13 Support	Enabled,	Enabled
	Disabled:NOT scan,	
Demoin Melidetien	Disabled:scan bus	Frablad
Domain Validation	Enabled, Disabled	Enabled
Support Removable Disks Under Int 13 as Fixed Disks	BOOL ONIY, All Dieke	Disaibed
	Disabled	
BIOS Support for Bootable CD-ROM	Enabled, Disabled	Enabled

#### **SCSI Bus Interface Definitions**

- SCSI Controller ID (Default: 7) Sets the SCSI ID for the SCSI card, This product is set at 7, which gives it the highest priority on the SCSI bus. It is recommended not to change this setting.
- SCSI Controller Parity (Default: Enabled) SCSI cards perform parity checking to verify th accuracy of data transfer on the SCSI bus. Most currently available SCSI devices support parity checking. However, if a device on the SCSI bus does not support parity checking, disable this option. You cannot mix devices that do and do not support parity checking on the same SCSI bus.
- SCSI Controller Termination (Default: Automatic) Determines the termination setting for the SCSI card. The default setting is Automatic, which allows the SCSI card to adjust the termination as needed. It is recommended not to change this setting.

#### **Additional Options**

#### **Boot Device Configuration**

Select Master SCSI Controller – (Default: 29320LPE)

#### SCSI Device Configuration

SCSI Device Configuration options can be set for each connected SCSI device.

- Sync Transfer Rate (Default: 160) Determines the maximum synchronous data transfer rate that the SCSI card supports. We recommend that you leave the maximum (default) value of 320MB/sec.
- Packetized (Default: Yes) Packetized protocol is required to operate 320MB/sed. When enabled, this option is available if it is implemented in the device drivers. However, this option is not supported by the BIOS.
- QAS (Default: Yes) Quick Arbitration and Selection reduces the overhead of control release on the SCSI bus from one device to another. This improvement reduces command overhead and maximizes bus utilization. When enabled, this option is available if it is implemented in the device drivers. However, this option is not supported by the BIOS.
- Initiate Wide Negotiation (Default: Yes) Enables the SCSI card to initiate Wide Negotiation with the SCSI target. When set to Yes, the SCSI card attempts 16-bit data transfer (wide negotiation). When set to No, the SCSI card used 8-bit data transfer unless the SCSI device requests wide negotiation.
- Enabled Disconnection (Default: Yes) When set to Yes, Enable Disconnection allows the SCSI device to disconnect from the SCSI bus. When set to No, the SCSI device cannot disconnect from the SCSI bus, packetized transfers cannot occur, and transfer rates are set at Ultra 160 levels.
- Send Start Unit Command (Default: Yes) When set tot Yes, sends the Start Unit Command to the SCSI device at boot up. This reduces the load on a system's power supply by allowing the SCSI card to turn on SCSI devices one-by-one when the system boots: otherwise, all SCSI devices turn on at the same time.

The following options have no effect if the SCSI card BIOS is disabled. (The SCSI card BIOS is normally enabled by default.)

- BIOS Multiple LUN Support (Default: No) Leave this setting at No if the device does not have multiple LUNs. When set to Yes, the SCSI card BIOS provides boot support for a SCSI device with multiple LUNs.
- Include in BIOS Scan (Default: Yes) When set to Yes, the SCSI card BIOS controls the SCSI device if it is an INT 13 device (such as a SCSI disk drive) without device driver. When set to No, the SCSI card BIOS does not control the SCSI device and device driver is required. The BIOS can support up to eight INT 13 devices without an additional device driver.

#### Advanced Configuration

- Reset SCSI Bus at IC Initialization (Default: Enabled) When set to Enabled, the BIOS resets the SCSI bus at POST time and then waits two seconds before scanning the bus for SCSI devices. If this option is disabled, the SCSI card BIOS does not issue a SCSI reset and there is no two-second delay.
- Display <Ctrl><A> Message During BIOS Initialization- (Default: Enabled) When set to Enabled, the SCSI card BIOS displays the Press <Ctrl> <A> for SCSISelect (TM) Utility! message on your screen during system bootup. If this setting is disabled, you can still invoke the SCSISelect Utility by pressing <Ctrl> <A> after the SCSI card BIOS banner appears.
- Extended INT 13 Translation for DOS Drivers > 1 GByte (Default: Enabled) When set to Enabled, provides an extended translation scheme for SCSI hard disks with capacities greater than 1 GB. This setting is necessary only for current versions of MS-DOS; it is not required for other operating systems, such as UNIX.
- Post Display Mode (Default: Verbose) During POST, the amount of information displayed depends on the mode. The following modes are available:
  - Verbose The results of the SCSI bus scan are displayed, but the results of the PCI bus scan are not displayed.
  - Silent Nothing is displayed about POST. However, error messages are displayed if there is a problem on the SCSI bus or SCSI devices.
  - Diagnostic The PCI and SCSI bus scan results are displayed separately. There is a pause between PCI and SCSI scans.
- SCSI Controller INT 13 Support (Default: Enabled) This option controls the state of the BIOS at POST time. The following settings are available..
  - Enabled Supports INT 13 for booting from a SCSI disk drive connected to the SCSI card. If you use this option, the following options are available.
    - Extended INT 13 Translation for DOS Drives > 1 GB
    - Support Removable Disks Under INT 13 as Fixed Disks
  - Disabled:NOT Scan Set to this option if all the devices on the SCSI bus are controlled by device drivers and do not need the BIOS, and you do not want the BIOS to scan the SCSI bus. SCSISelect remains available if needed.
  - Disabled:scan Bus Set to this option if all the devices on the SCSI bus are controlled by device drivers and you need the BIOS to scan the SCSI bus. Allows devices to spin up according to the setting of the Send Start Unit Command. SCSISelect remains available if needed.

The following options have no effect if the SCSI card BIOS is disabled. (The SCSI card BIOS is normally enabled by default.)

- Domain Validation (Default: Enabled) Determines the optimal transfer rate for each device on the SCSI bus and sets transfer rates accordingly. When enabled, this option sis available if it is implemented in the device drivers. However, this option is not supported by the BIOS.
- **Support Removable Disks Under BIOS as Fixed Disks** (Default: Disabled) Determines which removable-media drives are supported by the SCSI card BIOS. The options are as follows..
  - **Disabled** No removable-media drives running under DOS are treated as disk drives.
  - Software drivers are required because the drives are not controlled by the BIOS.
     Boot Only Only the removable-media drive designated as the boot device is treated as a
  - disk drive.
     All Disks All removable-media drives supported by the BIOS are treated as disk drives.
- BIOS Support for Bootable CD-ROM (Default: Enabled) When set to Enabled, the SCSI card BIOS allows the system to boot from CD-ROM drive.

### **SCSI Disk Utilities**

SCSI Disk Utilities scan the SCSI bus to recognize the installed SCSI devices, and displays all SCSI IDs and devices allocated to the IDs. In addition, the utilities can perform low-level format on hard disk drives, and check the drives.

- **Format Disk** Performs a low-level format on a hard disk drive. Most SCSI disk drives are preformatted at the factory and do not needs to be low-level format again.
- Verify Disk Media Scans and checks the media of a hard disk drive for defects. If the utility finds bad blocks on the media, it prompts you to reassign them; if you select yes, those blocks are no longer used. You can press Esc at any time to abort the utility.

# 6.Notice / Troubleshooting

## 6-1.Notice

Do not use Standby and Hibernation.



Please reboot a system when the SCSI device is inaccessible or the system log that shows the error in the event log is registered when returning from Standby and Hibernation.

## 6-2.Troubleshooting

If your operating system or applications do not operate correctly after installing this product, please check the following items.

- □ Is the product installed in the computer correctly?
- Are all SCSI devices turned on?
- □ Are all SCSI cables and power cords connected correctly?
- □ Is a unique SCSI ID assigned to each SCSI device connected to the SCSI bus?
- □ Is the SCSI bus terminated correctly?
- □ Is the SCSI driver for this product installed?



If the computer does not work correctly even when all the above items are confirmed, shut down the computer, disconnect the product, reboot the computer, and perform the self-diagnostic program POST. If POST ends normally, this product may be defective. Please contact your retailer or service center for repair.



#### Japanese Compliance

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づくクラスB情報技術 装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオや テレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説 明書に従って正しい取り扱いをしてください。

#### FCC Compliance Information Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



#### **European Union Compliance Statement**

This Information Technology Equipment has been tested and found to comply with EMC Directive 89/336/EEC, as amended by 92/31/EEC and 93/68/EEC, inaccordance with:

- EN55022 (1998+A1:2000+A2:2003) Emissions
- EN55024 (1998+A1:2001+A2:2003) Immunity:
  - EN61000-4-2 (1995) Electrostatic discharge:±4kV contact,±8kV air
  - EN61000-4-3 (1996) Radiated immunity
     EN61000-4-4 (1995) Electrical fast trans
  - EN61000-4-4 (1995) Electrical fast transients/burst:±1kV AC,±0.5kV I/O
  - EN61000-4-5 (1995) Surges±1kV differential mode,±2k common mode
  - EN61000-4-6 (1996) Conducted immunity:3V
  - EN61000-4-11 (1994) Supply dips and variation:30% and 100%

In addition, all equipment requiring U.L. listing has been found to comply EMC Directive 73/23/EEC as amended by 93/68/EEC in accordance with EN60950 with amendments A1, A2, A3, A4, A11.



#### Australian/New Zealand Compliance Statement

This device has been tested and found to comply with the limit for a Class B digital device, pursuant to the Australian/New Zealand standard AS/NZS 3548 set out by the Spectrum Management Agency.



#### **Canadian Compliance Statement**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.



#### **Taiwan Compliance Statement**

This device has been tested and found to comply with CNS13438, C6357 Class B digital device.

### N8103-107 SCSI コントローラ ユーザーズガイド SCSI Controller User's Guide

856-840545-001- A

2007 年 12 月 初版 December 2007 First Edition

日本電気株式会社 東京都港区芝五丁目7番1号

TEL (03) 3454-1111 (大代表)

© NEC Corporation 2007

落丁、乱丁の際はお取り替えいたします。 このマニュアルは再生紙を使用しています。 This manual is made with recycled paper.

